

HOBBYSEW'S GUIDE:



THE FITTED FACE MASK


REQUIREMENTS

- 1 X FAT EIGHTH OUTER FABRIC (PREFERABLY COTTON)
- 1 X FAT EIGHTH LINING FABRIC (PREFERABLY COTTON)
- 20CM NONWOVEN SEW IN INTERFACING
- APPROXIMATELY 35CM MASK ELASTIC (CUT INTO 2 PIECES)


CUTTING OUT

- USING THE PROVIDED PATTERN, CUT OUT:
- 2 PIECES WITH THE OUTER FABRIC
- 2 PIECES WITH THE LINING
- 2 PIECES WITH THE INTERFACING


THE FITTED FACE MASK

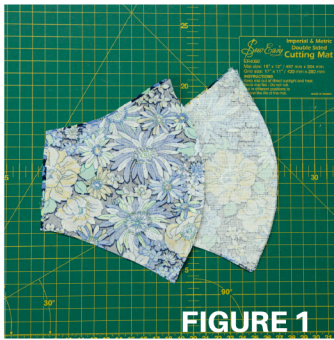


1. WITH THE RIGHT SIDE UP PLACE THE MAIN FABRIC ON THE TOP OF THE INTERFACING AND DO A BASTE STITCH AROUND ALL EDGES WITH A 6MM / 1/4" SEAM ALLOWANCE.

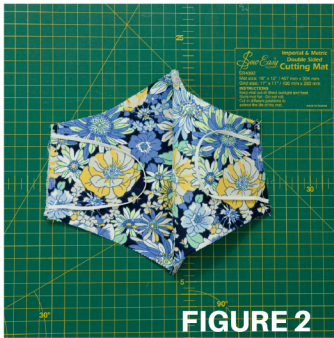


2. WITH THE RIGHT SIDES TOGETHER, SEW THE CENTRE FRONT SEAMS (MARKED A-B) IN BOTH THE MAIN AND LINING FABRICS (FIGURE 1).

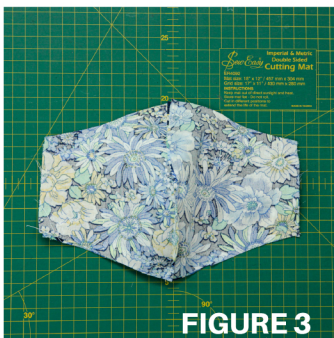

3. PLACE THE CUT ENDS OF THE ELASTIC SITTING FLUSH WITH THE MARKED EDGES C AND D IN THE PATTERN PIECE. BOTH PIECES NEED TO BE PLACED 1CM IN FROM THE EDGES A-C AND B-D, STITCH THE ELASTIC IN PLACE WITH A 6MM / 1/4" SEAM ALLOWANCE (FIGURE 2). THIS WILL REINFORCE THE ELASTIC PLACEMENT.

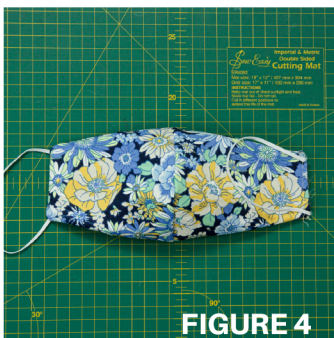

4. WITH THE RIGHT SIDES TOGETHER AND MATCHING CENTRE FRONT SEAMS, SEW MAIN FABRIC TO LINING AROUND ALL EDGES WITH A 1CM / 3/8" SEAM ALLOWANCE, BEING CAREFUL NOT TO CATCH THE ELASTIC (FIGURE 3). LEAVE A 4CM / 1.6" GAP ONLY ON ONE C-D SIDE.

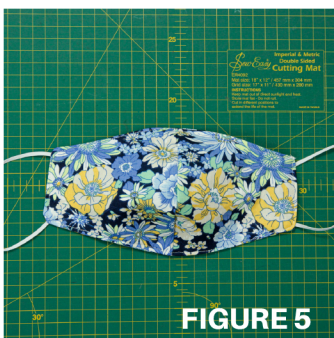

5. TRIM CORNERS BEING CAREFUL NOT TO CUT THE STITCHING AND TURN THE RIGHT WAY OUT THROUGH THE 4CM / 1.6" GAP IN THE SIDE SEAM OF C-D, LEFT IN STEP 4 (FIGURE 4).

6. PRESS AND TOP STITCH CLOSE TO EDGE SEWING THE GAP SHUT (FIGURE 5).

7. WASH MASK PRIOR TO WEARING.

PRINT AT ACTUAL SIZE

