

HOBBYSEW'S GUIDE:



THE PLEATED FACE MASK






REQUIREMENTS

- 1 X FAT EIGHTH OUTER FABRIC (PREFERABLY COTTON)
- 1 X FAT EIGHTH LINING FABRIC (PREFERABLY COTTON)
- 20 CM NONWOVEN SEW IN INTERFACING
- APPROXIMATELY 35CM MASK ELASTIC (CUT INTO 2 PIECES)

CUTTING OUT

- USING THE PROVIDED PATTERN, CUT OUT:
- 1 PIECE WITH THE OUTER FABRIC
- 1 PIECE WITH THE LINING
- 1 PIECE WITH THE INTERFACING

THE PLEATED FACE MASK

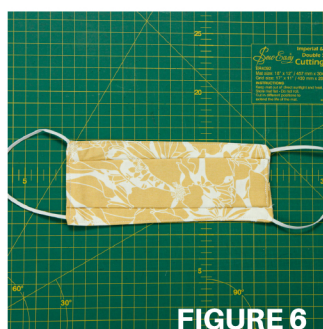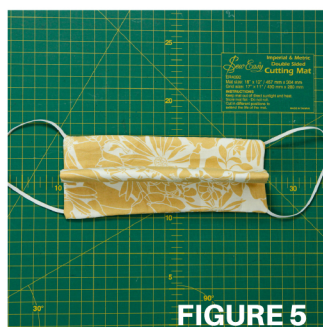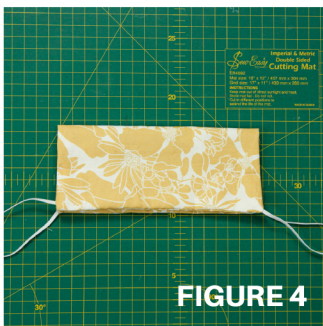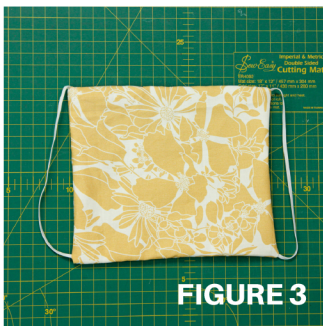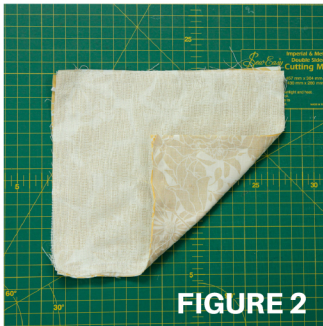

1. PLACE THE CUT ENDS OF ELASTIC TO SIT FLUSH WITH THE SIDE EDGE, AND 1CM IN FROM THE TOP AND BOTTOM EDGE OF THE RIGHT SIDE OF THE OUTER FABRIC (FIGURE 1); STITCH IN PLACE WITH A 6MM / 1/4" SEAM ALLOWANCE.

2. WITH THE RIGHT SIDES TOGETHER OF OUTER FABRIC AND LINING TOGETHER, PLACE INTERFACING ON TOP OF THE WRONG SIDE OF LINING (FIGURE 2). PIN ALL 3 LAYERS TOGETHER AND SEW AROUND PERIMETER OF RECTANGLE WITH A 1CM / 3/8" SEAM ALLOWANCE, LEAVING A 4CM / 1.6" GAP IN THE BOTTOM EDGE. REMOVE ALL OF THE PINS.

3. TRIM THE CORNERS BEING CAREFUL NOT TO CUT THE STITCHING AND TURN RIGHT WAY OUT THROUGH GAP IN BOTTOM EDGE (FIGURE 3) AND PRESS EDGES.

4. FOLD IN HALF HORIZONTALLY AND SEW A SMALL SEAM (APPROXIMATELY 2CM LONG) 4CM / 1.6" AWAY FROM THE FOLDED EDGE; CREATING A BOX PLEAT (FIGURE 4).

5. OPEN FLAT AND BRING FOLD LINE TO SMALL SEAM CENTRING BOX PLEAT (FIGURE 5). PRESS FLAT AND STITCH CLOSE TO THE EDGE ON ALL SIDES, SEWING DOWN PLEAT AND CLOSING GAP IN BOTTOM EDGE (FIGURE 6).

6. WASH MASK PRIOR TO WEARING.

PRINT AT ACTUAL SIZE

3CM X 3CM
SQUARE

